Chapter 2

# Disassembly Procedure

*Please follow the information provided in this section to perform the complete disassembly procedure of the Eee PC T91. Be sure to use proper tools described before.*

ASUS Eee PC T91 consists of various modules. This chapter describes the procedures for the complete Eee PC T91 disassembly. In addition, in between procedures, the detailed disassembly procedure of individual modules will be provided for your service needs.

The disassembly procedure consists of the following steps:

- Memory Module
- Keyboard Module
- Bottom Case Module
- Battery Module
- Flash Module
- WLAN Module
- Motherboard Module
- Top Case Module
- LCD Module

MEMORY MODULE

MEMORY REMOVAL

# Memory Module

*The illustration shows how to remove the memory module form the Eee PC T91.*

### Removing Memory module

1. Remove 2 screws here and take the DIMM door away. Push the latch to "OFF" to turn off the battery power.

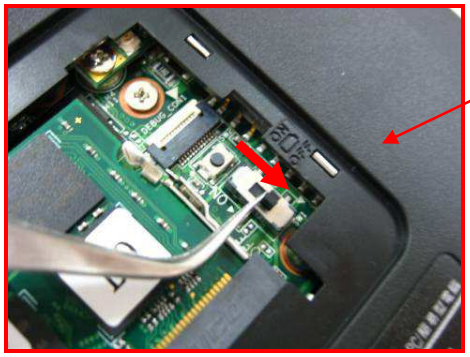

2. Softly open the two latches to pop the memory module up at 45 degree angles then remove the memory at that angle.

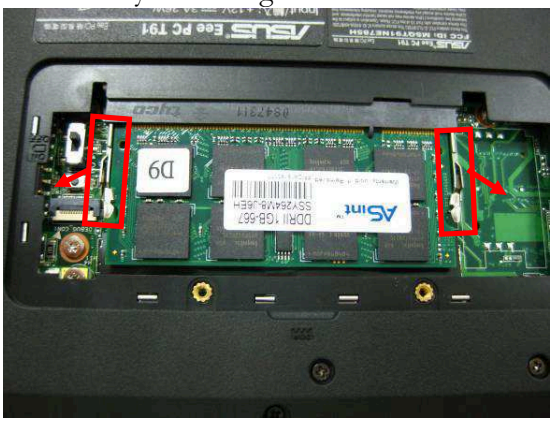

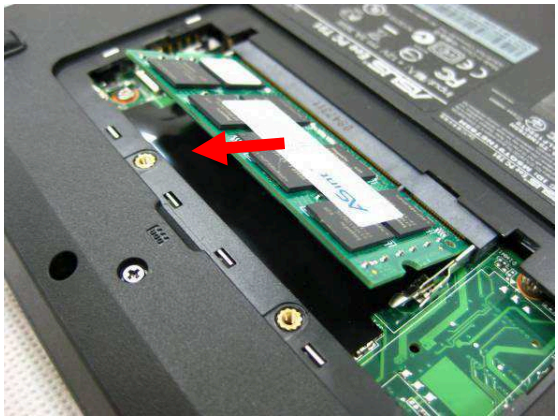

TOP